

CARE INSTRUCTIONS

X-Factor Shoulder Padding (SBEXFP)

Code: HSU639




1. Lay harness on table face down (rear attachment on top).



2. Lay padding under rear D ring with yellow section at the base end.



3. Slide cable tie through one loop and back up through the other and zip closed.

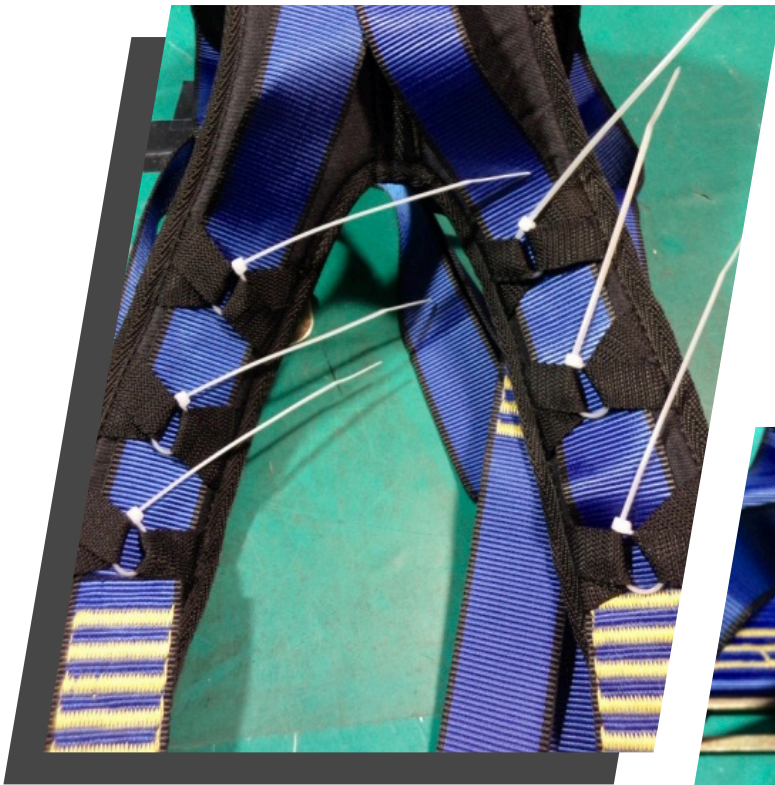

4. Repeat on all 10 loops.



5. Trim of excess cable tie, and rotate under webbing loop.

6. Cleaning and care: Remove padding before washing or inspecting a harness.

Carefully Cut cable ties and remove padding.

Use a mild detergent which **DO NOT** contain any Chlorine, Ammonia or abrasive chemicals and mix into a bucket of clean warm water at around 4°C. (Mild Laundry detergent or mild dish washing liquid are good choices). Wash padding with hand or sponge, rinse and allow to fully dry before refitting. It is important to take the opportunity to inspect both padding and harness with padding removed. Any damaged padding or harness will need to be replaced. Refit as per setps 1-5.

- **NEVER** put padding in the dryer. Excessive heat and tumbling can (and will) damage the padding.
- **Never Dry Clean**
- **Never use a high-pressure water blaster.**
- **Never use gasoline or other 'drying solvents' to clean padding.**